



TK-C700/TK-C720


These instructions are for TK-C700U, TK-C720U, TK-C700E and TK-C720E.

| |
|---|
| For Customer Use: |
| Enter below the Serial No. which is located on the body. Retain this information for future reference. |
| Model No. _____ Serial No. _____ |

IMPORTANT SAFEGUARDS

1. Read all of these instructions.
2. Save these instructions for later use.
3. All warnings on the product and in the operating instructions should be adhered to.
4. Unplug this appliance system from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.
6. Do not use this appliance near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
7. Do not place this appliance on an unstable cart, stand, or table. The appliance may fall, causing serious injury to a child or adult, and serious damage to the appliance may fall, causing serious damage to the appliance.
8. Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.
9. Do not use this appliance near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
10. Do not place this appliance on an unstable cart, stand, or table. The appliance may fall, causing serious injury to a child or adult, and serious damage to the appliance may fall, causing serious damage to the appliance.
11. Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.
12. Do not use this appliance near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
13. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
14. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
15. Never push objects of any kind into his appliance through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.
16. Do not attempt to service this appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. Unplug his appliance from the wall outlet and refer servicing to qualified service personnel under following conditions:
 - a. When the power cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the appliance.
 - c. If the appliance has been exposed to rain or water.
18. If the appliance does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.
19. If the appliance has been dropped or the cabinet has been damaged.
20. If the appliance exhibits a distinct change in performance - this indicates a need for service.
21. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Upon completion of any service or repairs to this appliance, ask the service technician to perform routine safety checks to determine that the appliance is in safe operating condition.

For USA and CANADA

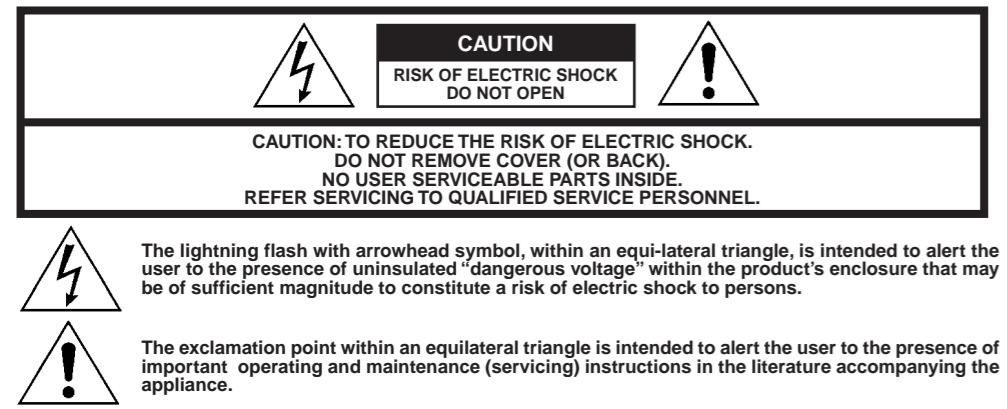

INFORMATION (FOR CANADA) RENSEIGNEMENT (POUR LE CANADA)

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

COLOR VIDEO CAMERA

Instructions

Thank you for purchasing the JVC color video camera. To obtain the best results from your new camera, read these instructions carefully before use; retain the manual for future reference.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

Information for USA
This device complies with Part 15 of the FCC Rules.
Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

Due to design modification, data given in this instruction book are subject to possible change without prior notice.

PRECAUTIONS

- Si l'un des sélecteurs AGC est activé, la sensibilité augmente automatiquement dans les endroits sombres. Si l'image présente un aspect granuleux, il ne s'agit pas d'une défaillance.
- Si l'on utilise un zoom, vérifier la mise au point arrière avant de monter la caméra. Ceci est également valable pour le réglage ALC ou LEVEL de l'objectif. (Pour les détails, voir le manuel d'instructions de l'objectif.)
- Lors de la prise de vue d'un sujet à forte intensité (par exemple une lampe), l'image de l'écran risque de présenter des lignes verticales (estompage) ou un flou (flou d'image) sur son pourtour (en particulier en mode AES). Ceci est typique des capteurs CCD et ne constitue pas une défaillance.
- Si l'on utilise un objectif EE, régler le commutateur d'obturateur électronique automatique (AES) sur OFF. S'il est réglé sur ON, il risque d'avoir un phénomène de scintillement. Si l'on utilise un objectif à diaphragme manuel, régler l'AES sur ON.
- Dans les endroits chauds, des lignes verticales peuvent apparaître sur l'écran de la caméra. Ceci est typique des capteurs CCD et ne constitue pas une défaillance.
- Le système d'alignement automatique peut ne pas fonctionner correctement lors d'une prise de vues avec un éclairage non standard ou un éclairage d'une température de couleur dépassant la capacité de la caméra. Dans ce cas, régler sur la position "MANU".
- Si le sujet de la prise de vues est une couleur pleine (autre que le blanc), le circuit automatique du blanc tentera normalement de transformer cette couleur en blanc. Avec cette caméra, s'il n'est pas possible d'effectuer un ajustement correct, le réglage précédent de la balance du blanc sera conservé jusqu'à ce que les couleurs du sujet soient plus diversifiées.
- En présence d'ondes électromagnétiques ou de magnétisme puissant, par exemple près d'un émetteur radio ou d'un téléviseur, d'un transformateur, d'un moteur, etc., l'image risque de renforcer des parasites et les couleurs de ne pas être correctes.
- Pour économiser l'énergie, bien mettre le système hors tension lorsqu'on ne s'en sert pas.

MOUNTING A LENS

1. Before mounting a lens, check whether it is a C-mount or CS-mount lens. → A
(See the reverse side)
If a C-Mount lens is used, loosen the back-focus locking screw (M 2.6) using a Phillips head screwdriver, turn the back-focus adjusting ring with your fingers or the screw-driver and change the mounting method.
2. Dimension (b) of the lens shown in the illustration must be as shown in the table below. If (b) exceeds the value in the table, it may damage the inside of the camera or correct mounting may be impossible; never use such lenses. Do not attach the C-mount lens when using a CS-mount. → B
(See the reverse side)


| Lens | Flange back (c) | Dimension (b) |
|---------------|-----------------|---------------|
| C mount lens | 17.526mm | 10mm or less |
| CS mount lens | 12.5mm | 5.5mm or less |

The F mark indicates a focal point.

3. Mount the lens on the camera by turning the lens clockwise. Adjust its position.
4. When using an auto-iris lens with an EE amplifier, turn the switch to the "VIDEO" side. When no EE amplifier is equipped, turn the switch to the "DC" side.
5. If the lens has an auto-iris mechanism, Connect the lens cable after checking the pin arrangement.

If the lens cable has a different type of plug, use the 4-P plug supplied.

| Lens | DC IRIS (does not contain EE amplifier) | VIDEO IRIS (contain EE amplifier) | | |
|---------|--|--------------------------------------|---|---|
| Pin No. | 1 | 2 | 3 | 4 |
| | Brake ⊖ | 9.5V [max 50mA] | | |
| | Brake ⊕ | NC | | |
| | Drive ⊕ | VIDEO | | |
| | Drive ⊖ | GND | | |

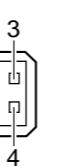

CONNECTION

1. When the camera is powered, the POWER LED lights up.

| CAMERA type | power |
|-------------------|---|
| TK-C700U/TK-C720U | AC 24V ~ (class 2 only) or DC 12V ___ |
| TK-C700E/TK-C720E | AC 24V ~ (isolated power only) or DC12V ___ |

- Never connect the DC 12V and AC 24V power inputs simultaneously.
- Be sure to observe the correct +, - polarity when connecting a DC 12V power input.

2. Connect to a video monitor, etc. (75Ω)
3. To install the camera onto a tripod, fixing unit, or pan/tilt unit, use the fall-preventive socket (d) shown in the illustration.

Special precautions must be taken for mounting the camera on a wall or a ceiling. We are not liable for any damage caused by improper installation.

4. Installation of camera

• Mounting from the bottom
This camera is originally designed to be mounted from the bottom, as shown ①. The hole is standard photographic pan-head screw size (1/4-20 UNC). Example

• Mounting from the top
Remove the CAMERA MOUNTING BRACKET (e) from the bottom of the camera by removing two fixing screws as shown ②. Attach the CAMERA MOUNTING BRACKET (e) to the top, then mount the camera on the Fixing Unit as shown ③. Make sure that two original screws are used when mounting the CAMERA MOUNTING BRACKET (e); longer type screws (over 5mm) may damage inner components.

(This camera is used indoor and under similar conditions.)

Fall Prevention

- Exercise maximum caution when installing the unit to the wall or ceiling. You should not engage in the installation work yourself. Ask a professional to do the job, since

the fall of the unit can result in injuries and accidents. (See the reverse side)

- When installing the unit on a fixer, turn table, etc., make sure to install it firmly using a rotation-preventing hole provided to prevent fall.

• To prevent fall, connect the unit to a section with sufficient strength (ceiling slab or channel) using a fall prevention wire such as a wire chain and the like. Use the screw hole on the back of the unit for installation.

Pay utmost attention to the length of the wire, too.

- Specified screw (M3 x 6 mm)

Never use any screw longer than the specified length as the inside can be damaged.

CAMÉRA VIDÉO COULEUR Manuel d'instructions

Nous vous remercions d'avoir acheté cette caméra vidéo couleur JVC. Pour obtenir les meilleurs résultats de votre nouvelle caméra, lisez attentivement ce manuel d'instructions avant l'utilisation ; puis, conservez le manuel pour toute référence ultérieure.

AVERTISSEMENT :

Pour éviter tout risque de choc électrique, ne pas exposer cet appareil à la pluie ni à l'humidité.
Pour des raisons d'évolution de la conception, le contenu de ce manuel d'instructions est sujet à modification sans préavis.

PRÉCAUTIONS

- Si l'un des sélecteurs AGC est activé, la sensibilité augmente automatiquement dans les endroits sombres. Si l'image présente un aspect granuleux, il ne s'agit pas d'une défaillance.
- Si l'on utilise un zoom, vérifier la mise au point arrière avant de monter la caméra. Ceci est également valable pour le réglage ALC ou LEVEL de l'objectif. (Pour les détails, voir le manuel d'instructions de l'objectif.)
- Lors de la prise de vue d'un sujet à forte intensité (par exemple une lampe), l'image de l'écran risque de présenter des lignes verticales (estompage) ou un flou (flou d'image) sur son pourtour (en particulier en mode AES). Ceci est typique des capteurs CCD et ne constitue pas une défaillance.
- Si l'on utilise un objectif EE, régler le commutateur d'obturateur électronique automatique (AES) sur OFF. S'il est réglé sur ON, il risque d'avoir un phénomène de scintillement. Si l'on utilise un objectif à diaphragme manuel, régler l'AES sur ON.
- Dans les endroits chauds, des lignes verticales peuvent apparaître sur l'écran de la caméra. Ceci est typique des capteurs CCD et ne constitue pas une défaillance.
- Le système d'alignement automatique peut ne pas fonctionner correctement lors d'une prise de vues avec un éclairage non standard ou un éclairage d'une température de couleur dépassant la capacité de la caméra. Dans ce cas, régler sur la position "MANU".
- Si le sujet de la prise de vues est une couleur pleine (autre que le blanc), le circuit automatique du blanc tentera normalement de transformer cette couleur en blanc. Avec cette caméra, s'il n'est pas possible d'effectuer un ajustement correct, le réglage précédent de la balance du blanc sera conservé jusqu'à ce que les couleurs du sujet soient plus diversifiées.
- En présence d'ondes électromagnétiques ou de magnétisme puissant, par exemple près d'un émetteur radio ou d'un téléviseur, d'un transformateur, d'un moteur, etc., l'image risque de renforcer des parasites et les couleurs de ne pas être correctes.
- Pour économiser l'énergie, bien mettre le système hors tension lorsqu'on ne s'en sert pas.

MONTAGE D'UN OBJECTIF

1. Avant de monter l'objectif, vérifier s'il possède une monture C ou une monture CS. → A
(Voir au verso.)
Pour utiliser un objectif à monture C, desserrer la vis de verrouillage de mise au point arrière (M 2,6) à l'aide d'un tournevis à tête Phillips, puis tourner la bague de réglage de mise au point arrière avec les doigts ou avec le tournevis, et changer de méthode de montage.
2. La dimension (b) de l'objectif indiquée sur le schéma doit être comme indiqué dans le tableau ci-dessous. Si (b) dépasse la valeur du tableau, cela risque d'endommager l'intérieur de la caméra ou d'empêcher un montage correct ; ne jamais utiliser ce genre d'objectifs. Ne pas fixer d'objectif à monture C sur une monture CS. → B
(Voir au verso.)

| Objectif | Foyer arrière (c) | Dimension (b) |
|-----------------------|-------------------|-----------------|
| Objectif à monture C | 17,526 mm | 10 mm ou moins |
| Objectif à monture CS | 12,5 mm | 5,5 mm ou moins |















L'indication F représente le foyer.

3. Monter l'objectif sur la caméra en tournant l'objectif dans le sens des aiguilles d'une montre. Ajuster sa position.

4. Si l'objectif possède un mécanisme de diaphragme automatique avec amplificateur EE, tourner le commutateur sur le côté "VIDEO". Si l'objectif ne renferme pas d'amplificateur EE, tourner le commutateur sur le côté "DC".

5. Si l'objectif possède un diaphragme automatique, Raccorder le câble d'objectif après avoir vérifié la disposition des broches. Si le câble d'objectif possède une fiche de type différent, utiliser la fiche à 4 broches fournie.

| Objectif N.º de broche | Diaphragme CC (sans amplificateur EE) | Diaphragme VIDEO (avec amplificateur EE) |
|---------------------------|--|---|
| 1 | Frein ⊖ | 9,5 V [50 mA max] |
| 2 | Frein ⊕ | NC |
| 3 | Tournevis ⊕ | VIDEO |
| 4 | Tournevis ⊖ | Terre |

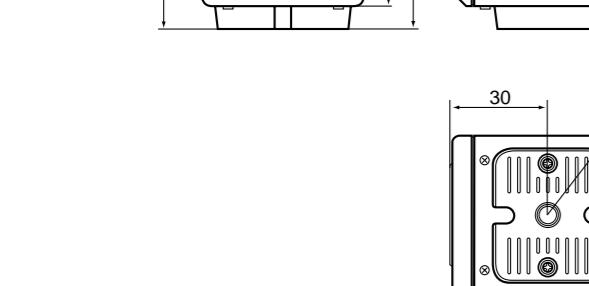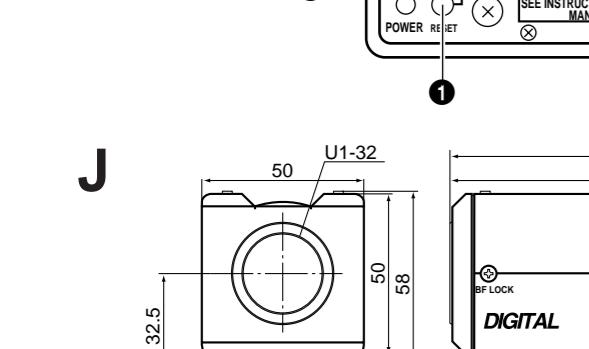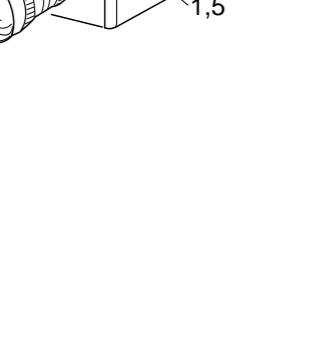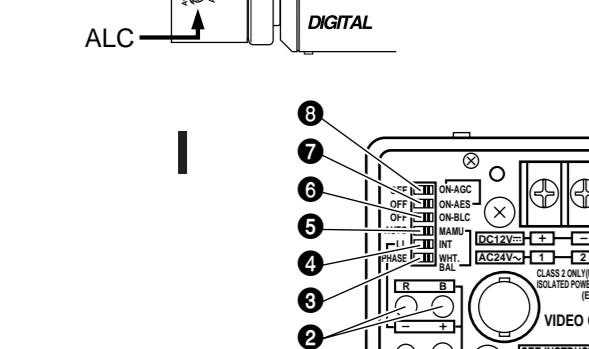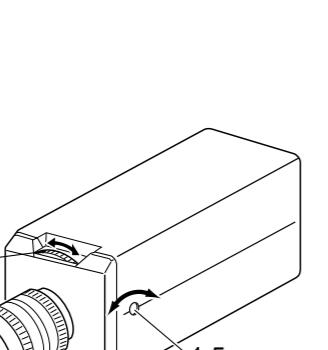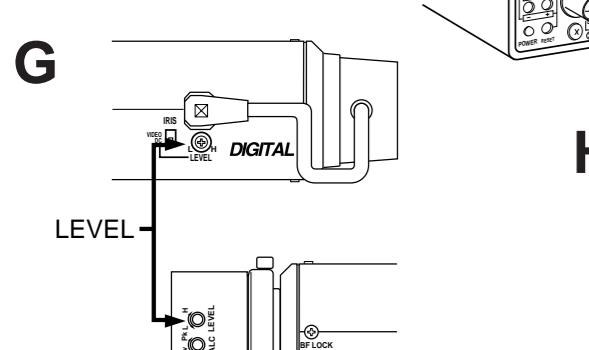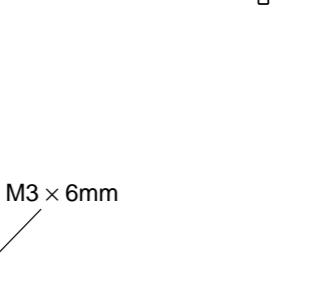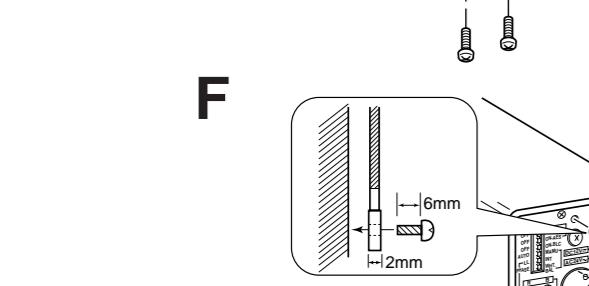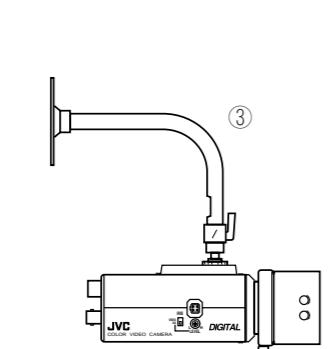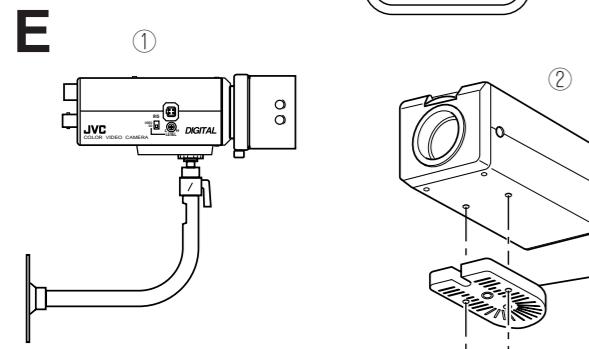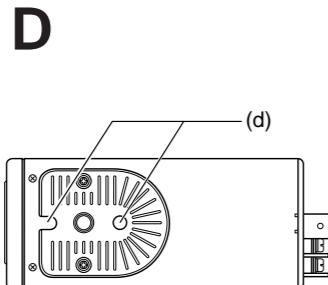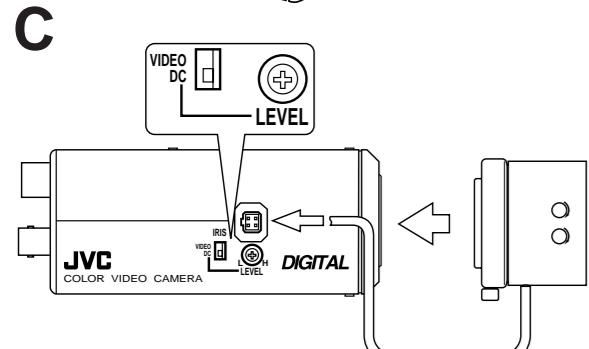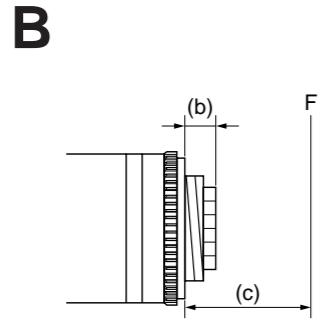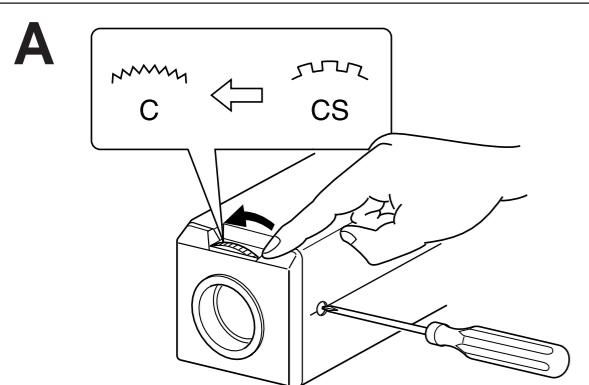

JVC®

SC96926H-001

©2000 VICTOR COMPANY OF JAPAN, LIMITED
JVC® is a Registered Trademark owned by VICTOR COMPANY OF JAPAN, LTD.
JVC® is a Registered Trademark in Japan, the U.S.A., the U.K. and many other countries.

LENS ADJUSTMENT

Video adjust

Connect the camera according to the connection method, turn it on, display an image on the monitor, and check the image. The camera has been factory-adjusted to the best position, but it may need to be adjusted according to the object conditions or combination of lenses. If the image is unnatural, adjust it as follows:

• LEVEL adjustment

| Monitor screen | LEVEL turning direction |
|----------------|-----------------------------|
| Too bright | Counterclockwise (Toward L) |
| Too dark | Clockwise (Toward H) |

• ALC adjustment

| Monitor screen | ALC turning direction |
|--|------------------------------|
| Part (high-intensity part) of the screen halates. | Clockwise (Toward Pk) |
| Other part of screen (except high-intensity part) darkens. | Counterclockwise (Toward Av) |

- If the sensitivity adjustment LEVEL is turned excessively to L, the sensitivity increases because of the AGC function of the camera, and the image looks grainy.
- If the video iris lens is set to too low a level, malfunction such as the hunting phenomenon, in which the iris opens or closes unintentionally, may occur. In such a case, first set LEVEL potentiometer on the lens to the H (iris open) position then adjust it to the optimum level.

Back focus adjustment

The back focus has been factory-adjusted to the best point for CS-mount lens, but it may need to be re-adjusted if the mount is changed to the C-mount or if a different lens is used. If required, adjust it as follows:

• With a fixed-focus lens

If the focus can not be adjusted correctly by rotating the lens focus ring, adjust the back focus as follows:

- Loosen the back focus locking screw by turning it counterclockwise (↖) with a screwdriver.
- Shoot a pattern closely.
- Turn the lens focus ring to ↖.
- Turn the back focus adjustment ring to focus at the best point.
- Tighten the back focus locking screw by turning it clockwise (↗).

• With a zoom lens

If the image is out of focus when zooming (telephoto wide-angle), adjust the camera as follows:

- Loosen the back focus locking screw by turning it counterclockwise (↖) with a screwdriver.
- Shoot a comparatively dark scene with thin lines.
- Set the lens to the maximum telephoto position, and adjust the lens focus.
- Set the lens to the maximum wide-angle position, and turn the back focus ring to adjust the focus.
- (Repeat steps 2 and 3 two or three times.)
- Tighten the back focus locking screw by turning it clockwise (↗).

SETTING SWITCH

Line Lock

To set the camera in LL mode for synchronization with the power supply frequency, take the following steps:

- Turn switch ① to "LL".
- Turn switch ③ to "PHASE".
- Press the + or - button ② to make the phase variable.

Adjust with the button ② so that the vertical phase of the camera matches the vertical phase of another camera (or system) with a multi-channel oscilloscope. For initial setting, press RESET button ①.

Type U: 60Hz power region only
Type E: 50Hz power region only

White Balance

White balance can be adjusted within the scope of 2900K to 8000K color temperature. When switch ④ is at "AUTO", the white balance is adjusted automatically.

For manual adjustment, take the following steps:

- Turn switch ④ to "MANUAL".
- Turn switch ⑤ to "WHT.BAL".
- Pressing "R" button ② increases redness while pressing "B" increases blueness. For initial setting, press RESET button ①.

There are cases sometimes when the white balance cannot be adjusted manually for artificial lights such as fluorescent lights, etc.

BLC (Back Light Compensation)

The switch ⑥ improves an image that is darkened because of backlighting. Set this switch to ON for backlight subjects.

AES (Automatic Electronic Shutter)

Turning this switch ⑦ "ON" when a lens with a manual iris diaphragm is used enables the automatic adjustment of image brightness. In this case the shutter speed changes according to the brightness of the subject. AES functions only when AGC switch ⑧ is turned on.

Hunting may occur at a certain object brightness due to the mechanism of the AES circuit, but this is not a fault.

AGC (Automatic Gain Control)

The switch ⑧ automatically increases the camera's sensitivity when the level of ambient light drops.

ON: AGC is activated.

OFF: AGC is not activated.

SPECIFICATIONS

Image pickup device

Number of effective pixels

: 1/3-inch interline-transfer CCD

: TK-C700U: 250000 (510 (H) × 492 (V))

: TK-C700E: 290000 (500 (H) × 582 (V))

: TK-C720U: 380000 (768 (H) × 494 (V))

: TK-C720E: 440000 (752 (H) × 582 (V))

Synchronization method

Scanning frequency

Resolution

Video output

Video S/N ratio

Minimum required illumination

Lens mount

Power supply

and power consumption

Ambient temperature

Mass

Provided accessory

DIMENSIONS (Unit: mm)

(Design and specifications are subject to change without notice.)

RÉGLAGE DE L'OBJECTIF

Réglage vidéo

Raccorder la caméra en fonction de la méthode de raccordement, la mettre sous tension, afficher une image sur le moniteur et vérifier l'image. La caméra a été réglée en usine sur la plage la plus large, mais il faudra peut-être l'ajuster en fonction des conditions du sujet ou de la combinaison des objectifs. Si l'image n'est pas naturelle, l'ajuster comme suit :

• Réglage de LEVEL

| Ecran du moniteur | Sens de rotation de LEVEL |
|-------------------|--|
| Trop clair | Sens inverse des aiguilles d'une montre (vers L) |
| Trop sombre | Sens des aiguilles d'une montre (vers H) |

• Réglage de ALC

| Ecran du moniteur | Sens de rotation de ALC |
|--|---|
| Une partie de l'écran (partie à forte intensité) affiche un effet de halo. | Sens des aiguilles d'une montre (vers Pk) |
| Une autre partie de l'écran (à l'exception de la partie à forte intensité) est sombre. | Sens inverse des aiguilles d'une montre (vers Av) |

- Si la commande de sensibilité LEVEL est tournée trop loin vers L, la sensibilité augmentera sous l'effet de la fonction AGC de la caméra et l'image semblera granuleuse.
- Si le niveau de l'objectif à diaphragme vidéo est réglé trop bas, cela risque d'engendrer une instabilité ou toute autre anomalie dans laquelle le diaphragme s'ouvre ou se ferme indépendamment de la volonté de l'opérateur. Dans ce cas, commencer par régler le potentiomètre LEVEL de l'objectif sur la position H (diaphragme ouvert), puis le régler au niveau maximum.

Réglage de la mise au point arrière

La mise au point arrière a été réglée en usine sur le point optimal pour un objectif à monture CS, mais il faudra peut-être l'ajuster si l'on utilise une monture C ou un autre objectif. Si nécessaire, effectuer le réglage comme suit :

• Avec un objectif à focale fixe

S'il n'est pas possible de régler la mise au point en tournant la bague de réglage de mise au point, régler la mise au point arrière comme suit :

- Desserrez la vis de fixation de mise au point arrière en la tournant dans le sens inverse des aiguilles d'une montre (↖) à l'aide d'un tournevis.
- Filmer un motif de prises.
- Tourner la bague de réglage de mise au point sur ↖.
- Tourner la bague de réglage de mise au point arrière de façon à obtenir la mise au point optimale.
- Resserrez la vis de fixation de mise au point arrière en la tournant dans le sens des aiguilles d'une montre (↗).

• Avec un zoom

Si l'image est floue lors d'une prise de vue au zoom (téléobjectif - grand angle), régler la caméra comme suit :

- Desserrez la vis de fixation de mise au point arrière en la tournant dans le sens inverse des aiguilles d'une montre (↖) à l'aide d'un tournevis.
- Filmer une scène relativement sombre avec des lignes fines.
- Régler l'objectif sur la position téléobjectif maximale, et régler la mise au point de l'objectif.
- Régler l'objectif sur la position grand angle maximale, et tourner la bague de mise au point arrière pour régler la mise au point.
- (Recommencez les opérations 2 et 3 deux ou trois fois de suite.)
- Resserrez la vis de fixation de mise au point arrière en la tournant dans le sens des aiguilles d'une montre (↗).

REGLAGE DES COMMUTATEURS

Verrouillage sur ligne

Pour régler la caméra en mode LL en vue d'une synchronisation sur l'alimentation électrique, procéder comme suit :

- Tourner le commutateur ① sur "LL".
- Tourner le commutateur ③ sur "PHASE".
- Enfoncer le commutateur ② sur le côté + ou - et régler la phase variable.

Régler avec la touche ② de façon que la phase verticale de la caméra corresponde à la phase verticale d'une autre caméra (ou d'un système) avec un oscilloscope multicanaux.

Pour obtenir le réglage initial, appuyer sur la touche RESET ①.

Il peut arriver que la balance des blancs ne puisse être réglée manuellement, du fait de certains éclairages artificiels comme les tubes fluorescents, etc.

BLC (Correction de contre-jour)

Le commutateur ⑥ améliore une image qui est assombrie sous l'effet d'un contre-jour. Mettre ce commutateur sur ON pour prendre un sujet à contre-jour.

AES (Obturador électronique automatique)

Enclencher (ON) ce commutateur ⑦ lors de l'utilisation d'un objectif à diaphragme manuel pour obtenir un réglage automatique de la luminosité de l'image. Dans ce cas, la vitesse d'obturation change en fonction de la luminosité du sujet. L'AES ne fonctionne que lorsque le commutateur AGC ⑧ est enclenché.

Avec certaines luminosités du sujet, il risque de se produire une instabilité à cause du mécanisme du circuit AES. Il ne s'agit toutefois pas d'un défaut.

AGC (Réglage automatique du gain)

Le commutateur ⑧ augmente automatiquement la sensibilité de la caméra quand l'éclairage ambiant diminue.

ON : L'AGC est activé.

OFF : L'AGC est désactivé.

CARACTÉRISTIQUES TECHNIQUES

Dispositif de capture d'image

Nombre de pixels efficaces

AJUSTE DEL OBJETIVO

Ajuste de vídeo

Conecte la videocámara de acuerdo con el método de conexión, conecte su alimentación, haga que se visualice una imagen en el monitor, y compruebe la imagen. La vide